


IntelliStage™

Equipment and Wheelchair Ramps

by Road Ready



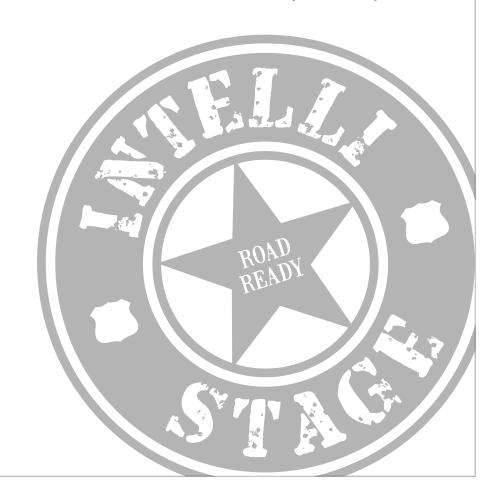

IntelliStage

Equipment and Wheelchair Ramp

by Road Ready

0	_				L.
	n	nт	·О	m.	ГC

Introduction / About Your Ramp	. 1
Meet the Components	. 2
Important Safety Instructions	. 2
Stage Preparation	
Leg Preparation	. 3
Ramp Assembly	
Adding Platofms	. 5
Adding GuardRails	. 6
Ramp Configurations7-	28
Individual Ramp Components	29
Ramp Transportation Systems	30
Limited 2 Year Warranty	30

Introduction

Thank you for being a Road Ready Customer and welcome to the family.

We do one thing and do it well – build products that make your life easier. Crafting innovative, quality products is our calling and we take it seriously. Strong, lightweight and versatile, **IntelliStage™** products are crafted out of the finest materials available and put through our grueling quality check before they are ships out the door.

We thank you for your purchase and know that your **IntelliStage™** system will definitely steal the show! However, if you should require any assistance or service, you'll find that we take as much pride in supporting our products as we do in designing and building them.

About Your Ramp

Flexible, Adaptive and Modular, IntelliStage™ ramps offer endless possibilities and configurations.

Adjustable and Adaptive

Designed to fit your needs, ramps can be adjusted from either a steep slope suited for equipment loading or a shallow slope for wheelchair access. All ramps are based around our modular metal platform frames and can accept matching sized Carpet, Tuffcoat or Industrial finish platforms. Ramp legs are height adjustable to ensure your ramp slope is always uniform and perfectly aligned. Ramps sections can be added, reconfigured and adjusted as your needs change - landings allow for the creation of turns, and switch back configurations to minimize the overall ramp footprint.

Safe and Secure


Guardrails can be added to any ramp and come standard on all wheelchair packages. Ramp legs and side mounting hardware secure all ramp frames together to create a rock solid and secure ramp.

Hassle Free Transportation

Our optional transportation solutions take the hard work out of transporting your ramp system. We offer trolley solutions for small packages and caster board/guardrail trolley solutions for larger packages. Consult your local **IntelliStageTM** dealer to find out which transportation system will work best for your needs, or visit **www.IntelliStage.com** for more details.

Meet the Components:

Putting together your **IntelliStageTM Ramp** system was designed to be simple enough for anyone to do. Consequently, the number of components you will encounter in the assembly process is limited. Nonetheless, let's take a moment for a little meet and greet...

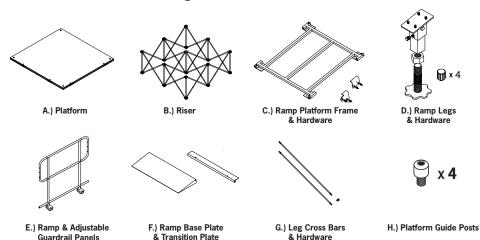

A.) Platform

Durable, modular stage surface - supports up to 185 lbs./sq. ft. (900kg/sq. meter).

B.) Riser

Supports platform surface - available in 8", 16", 24" and 32" (20, 40, 60 & 80 cm.) heights.

C.) Ramp Platform Frame & Hardware

The ramp frame is the base component for building a ramp. **IntelliStage™** platforms and Ramp legs all attach to the ramp frames.

D.) Ramp Legs & Hardware

Ramp legs are height adjustable and can pivot to change the ramp slope from a steep angle suited for equipment to a shallow slope suitable for wheelchair access.

E.) Ramp & Adjustable Guardrail Panels

Ramp guardrails can be added to any ramp and come standard on wheelchair ramps. Adjustable guardrails are required for all transitions between sloped and level ramp surfaces (and vice versa).

F.) Ramp Base Plate & Transition Plate

These plates are used to smoothly transition from either sloping or level surfaces.

G.) Leg Cross Bars & Hardware

Leg cross bars helps support and are required for leg sets #8 and #9.

H.) Platform Guide Posts

Guide posts align platforms on the ramp frames. Platform guide posts are included with the ramp frame hardware.



Important Safety Instructions:

- 1.) Read and follow all instructions
- 2.) Do not exceed the maximum weight capacity
- 3.) Do not vertically couple more than 2 risers
- 4.) Completely secure all fasteners, platforms, legs and frames
- 5.) Assemble and use only on a flat and level surface

STAGE PREPARATION:

Identify the ramp configuration you wish to build from pages 7-28 and verify that you have all required hardware and adequate space for assembly of your ramp.

 Set up your stage. If your stage or ramp will have guardrails, drill the guardrail holes at this time. For more information consult the IntelliStage™ Portable Stage System user manual.


If you do not have a copy of the portable stage manual it can be downloaded at IntelliStage.com


- **2.)** If your ramp configuration has a top landing assemble and attach it to the stage at this time. Landing assembly is identical to platform and riser assembly.
- **3.)** Attach one ramp connecting plate onto either your stage or top landing where the ramp will attach. You may need to remove the platform-to-platform locking mechanisms on the specific platform where you will attach the ramp connecting plate. Platform locking mechanisms simply unscrew using a hex key and slide out of the platform.


LEG PREPARATION:


- **4.)** Adjust all ramp leg slopes to either the wheelchair or equipment angle depending on your configuration. The slope can be changed by securing the nut onto the side marked as either E (Equipment) or W (Wheelchair), see Fig 4.
- **5.)** Measure and adjust each numbered leg to its specified height (*leg numbers are marked on the top of each leg*). All leg numbers required for your configuration and their respective heights can be found on pages 7-28.


Note: Leg heights are measured as shown in Fig 5.
Leg heights are adjusted by turning the leg base while keeping the top stationary as shown.

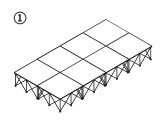

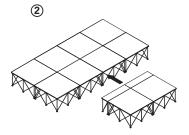

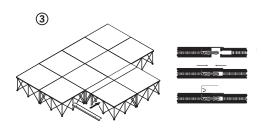

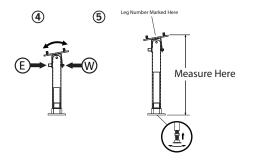

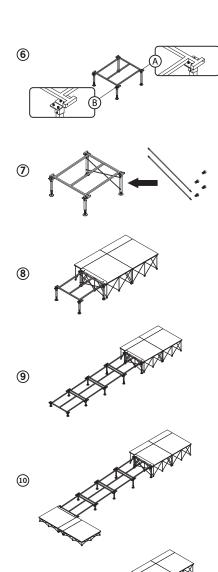

(11)

RAMP ASSEMBLY:

6.) We recommend to begin assembling you're ramp starting from the top. Starting from the top ensures that you have enough space and that the ramp is properly aligned when finished.

Note: Initially leave all hardware nuts and bolts fairly loose to allow for later ramp adjustments.

- **A.)** According to your ramp configuration take the tallest legs and attach them to the first frame. The top legs should be attached as shown in Fig A with all 4 screw posts on a single frame.
- **B.**) Attach the next set of legs (where applicable) to the first frame as shown in Fig B. Only attach 2 screw posts to the first frame. The remaining 2 screw posts will attach to the next frame.
- **7.)** Where leg sets #8 or #9 are used secure them with ramp leg crossbars and hardware as shown in Fig 7.
- **8.)** Move your completed tallest frame next to your stage where you installed your ramp connecting plate. *Do not yet secure the ramp to the finished stage*. Make any height adjustments necessary.

Note: The ramps will be approximately 1" lower than your landings or stage at this point because the platforms have not been added.

- **9.)** Continue to attach all legs and frames together as previously shown in Fig 6A for legs next to landings/stages or as shown in Fig 6B where frame-to-frame connections are made.
- **10.)** Should your ramp design have a middle landing for either a switchback or turn, assemble the landing and attach ramp connecting plates at all points ramps will attach. See Fig 3 and 10.
- **11.)** Continue ramp assembly as necessary.
 - **A.)** After ramp frame assembly is completed make any height adjustments required.

Securely tighten all hardware that was previously left loose before proceeding.

ADDING PLATFORMS:

If your ramp configuration will have guardrails and you have not yet drilled the guard rail platform holes do so at this point before proceeding. For more detailed instructions consult the IntelliStage™ Portable Stage System user manual.


If you do not have a copy of the portable stage manual it can be downloaded at IntelliStage.com


12.) Secure the 4 platform connection posts to all frames as shown in Fig 12. Connection posts are supplied as part of the frame hardware.


Note: You may need to make leg height adjustments during the following steps. See Step 17.


- 13.) Place the first platform onto the top ramp frame as shown. Move ramp next to the top landing or stage. Secure ramp to stage with the provided side mounting bracket harware. Repeat this step at all remaining ramp and landing connections. You may need to remove the platform-to-platform locking mechanisms. Locking mechanisms simply unscrew using a hex key and slide out of the platform.
- 14.) Place platforms on all remaining frames. You may need to remove the platform-to-platform locking mechanisms. Locking mechanisms simply unscrew using a hex key and slide out of the platform.
- 15.) Secure all platforms to their frames with the frame side mounting brackets as shown. The side mounting brackets hold the platforms in place and also lock the frames together.
- 16.) Install and attach the ramp base plate to the ramp with the supplied side mounting hardware.
- 17.) Make height adjustments as required to keep the ramp slope uniform and inline then secure all legs with their integrated locking nuts. *leg set #1 does not have integrated locking nuts.*


Your basic ramp assembly is now complete.

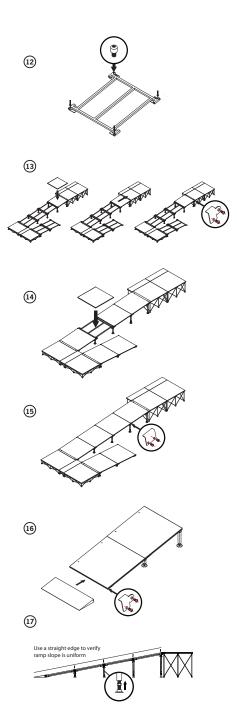

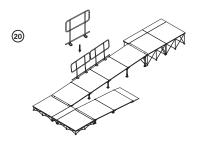

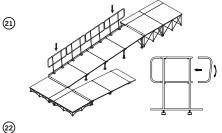

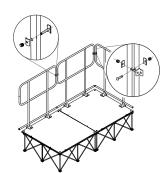

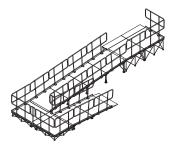

ADDING GUARDRAILS: (optional)

For more detailed instructions on guardrail installation please consult the IntelliStage™ Portable Stage System user manual.

If you do not have a copy of the portable stage manual it can be downloaded at IntelliStage.com


- 18.) If your ramp configuration requires guardrails install and secure them on the platforms with the supplied hardware see step 19 before proceeding.
- 19.) At all transitions from a slope to a flat landing or stage (or vice versa) you will need adjustable ramp guardrails. Adjust the guardrails for the proper slope and install them onto the platforms as needed. Adjustable guardrails sections are interchangeable and reversible.
- 20.) Connect guardrails together using guardrail side mounting bracket hardware for rails in a straight line and corner mounting bracket hardware for rails forming a corner.

Your guardrail ramp is now complete.


IS8RC, IS8RT, IS8RI



Equipment Ramp for 8 inch High Stages

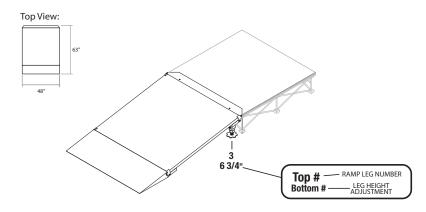

* Stage not included with ramp




SKU	DESCRIPTION	PCS PER Master Pack	QTY IN SET
ISP4X4CS	4' x 4' Carpet Finish Platform		
or ISP4X4TS	4' x 4' TuffCoat Finish Platform	1	1
or ISP4X4IS	4' x 4' Industrial Finish Platform		
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	1


IS8RWC, IS8RWT, IS8RWI



Straight Wheelchair Ramp for 8 inch High Stages Wheelchair ramps include guardrails (not shown)

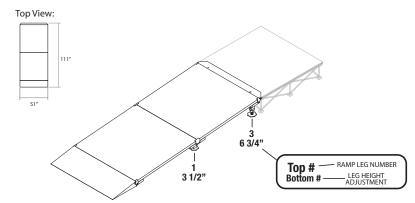

* Stage not included with ramp *Guard Rails Not Shown in diagram




SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN Set
ISP4X4CD or	4' x 4' Carpet Finish Platforms	0	-1
ISP4X4TD or ISP4X4ID	4' x 4' TuffCoat Finish Platforms 4' x 4' Industrial Finish Platforms	2	ı
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	2
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	1
ISRGRPD	Two pack guard rail panels for 4' ramps w/ mounting hardware	2	1
ISARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1


IS16RC, IS16RT, IS16RI



Equipment Ramp for 16 inch High Stages

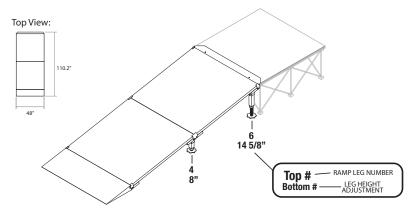

* Stage not included with ramp




SKU	DESCRIPTION	PCS PER Master Pack	QTY IN SET
ISP4X4CD or	4' x 4' Carpet Finish Platforms		
ISP4X4TD	4' x 4' TuffCoat Finish Platforms	2	1
or ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	2
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1

IS16RLC, IS16RLT, IS16RLI



Equipment Ramp with Landing for 16 inch High Stages

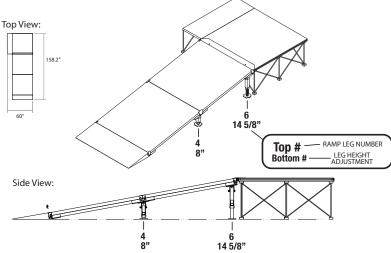


SKU	DESCRIPTION	PCS PER Master Pack	QTY IN SET
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD or	4' x 4' TuffCoat Finish Platforms	2	1
ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISP4X4CS	4' x 4' Carpet Finish Platform		
or ISP4X4TS	4' x 4' TuffCoat Finish Platform	1	1
or ISP4X4IS	4' x 4' Industrial Finish Platform		
ISSTEPC4 or	4' x 1' Carpet Finish Step Platform		
ISSTEPT4	4' x 1' TuffCoat Finish Step Platform	1	1
or ISSTEPI4	4' x 1' Industrial Finish Step Platform		
IS4X4X16	16" High Riser for 4'X4' Platform	1	1
ISSTEP4X16	16" High Riser for 4' x 12" Step	1	1
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	2
IS2AL4 IS2AL6	Two pack of equipment ramp adjustable leg # 4 with hardware Two pack of equipment ramp adjustable leg # 6 with hardware	2 2	1

IS16RWC, IS16RWT, IS16RWI



Straight Wheelchair Ramp for 16 inch High Stages Wheelchair ramps include guardrails (not shown)

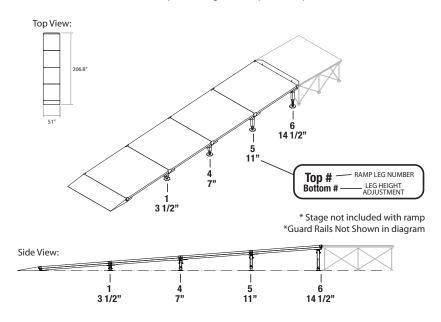


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN Set
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD	4' x 4' TuffCoat Finish Platforms	2	2
or ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	4
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
ISRGRPD	Two pack guard rail panels for 4' ramps w/ mounting hardware	2	3
ISARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1

IS16RLWC, IS16RLWT, IS16RLWI



Straight Wheelchair Ramp with Landing for 16 inch High Stages

Wheelchair ramps include guardrails (not shown)

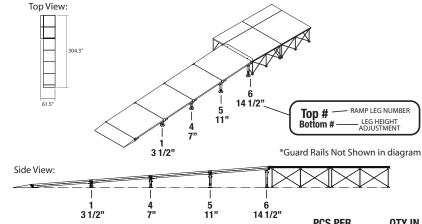


SKU	DESCRIPTION	PCS PER MASTER PACK	SET
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD	4' x 4' TuffCoat Finish Platforms	2	3
or ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISSTEPC4	4' x 1' Carpet Finish Step Platform		
ISSTEPT4	4' x 1' TuffCoat Finish Step Platform	1	2
or ISSTEPI4	4' x 1' Industrial Finish Step Platform		
IS4X4X16	16" High Riser for 4'X4' Platform	1	2
ISSTEP4X16	16" High Riser for 4' x 12" Step	1	2
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	4
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
ISRSTEPGRPD	Two pack of step guard rail panels w/ mounting hardware	2	1
ISRGRPD	Two pack guard rail panels for 4' ramps w/ mounting hardware	2	5
ISARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	1

IS24RC, IS24RT, IS24RI



Equipment Ramp for 24 inch High Stages

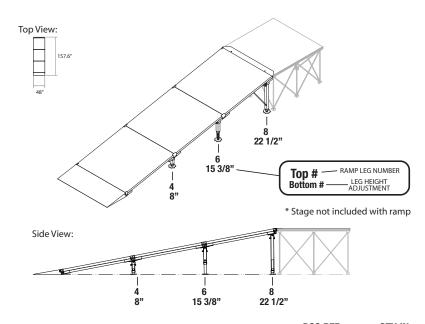


SKU	DESCRIPTION	PCS PER Master Pack	QTY IN Set
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD or	4' x 4' TuffCoat Finish Platforms	2	1
ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISP4X4CS	4' x 4' Carpet Finish Platform		
or ISP4X4TS	4' x 4' TuffCoat Finish Platform	1	1
or ISP4X4IS	4' x 4' Industrial Finish Platform		
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	3
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	1

IS24RLC, IS24RLT, IS24RLI



Equipment Ramp with Landing for 24 inch High Stages

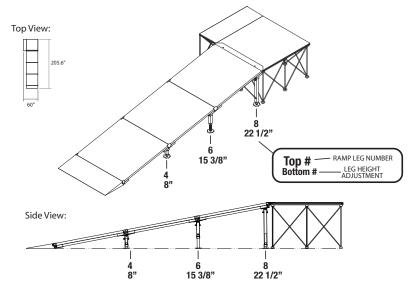


SKU	DESCRIPTION	PCS PER Master Pack	QTY IN Set
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD	4' x 4' TuffCoat Finish Platforms	2	2
or ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISSTEPC4	4' x 1' Carpet Finish Step Platform		
or ISSTEPT4	4' x 1' TuffCoat Finish Step Platform	1	1
or ISSTEPI4	4' x 1' Industrial Finish Step Platform		
IS4X4X24	24" High Riser for 4'X4' Platform	1	1
ISSTEP4X24	24" High Riser for 4' x 12" Step	1	1
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	3
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	1

IS24RCGR, IS24RTGR, IS24RIGR



Equipment Ramp with Guard Rails for 24 inch High Stages

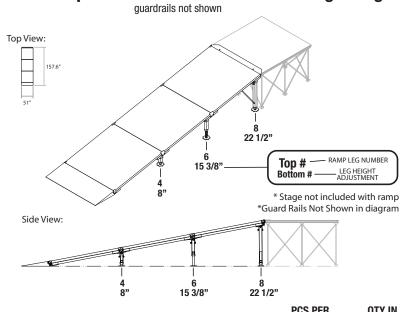


SKU	DESCRIPTION	MASTER PACK	SET
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD or	4' x 4' TuffCoat Finish Platforms	2	1
ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISP4X4CS or	4' x 4' Carpet Finish Platforms		
ISP4X4TS	4' x 4' TuffCoat Finish Platforms	1	1
or ISP4X4IS	4' x 4' Industrial Finish Platforms		
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	3
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	1
ISRGRPD	Two pack guard rail panels for 4' ramp w/ mounting hardware	2	2
ISARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1

IS24RLCGR, IS24RLTGR, IS24RLIGR



Equipment Ramp with Guard Rails and Landing for 24 inch High Stages guardrails not shown

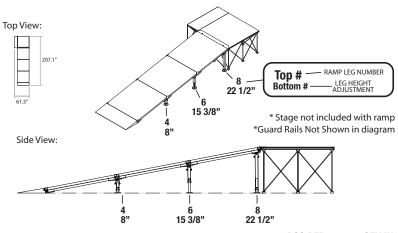


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN Set
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD or	4' x 4' TuffCoat Finish Platforms	2	2
ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISSTEPC4	4' x 1' Carpet Finish Step Platform		
or ISSTEPT4	4' x 1' TuffCoat Finish Step Platform	1	1
or ISSTEPI4	4' x 1' Industrial Finish Step Platform		
IS4X4X24	24" High Riser for 4'X4' Platform	1	1
ISSTEP4X24	24" High Riser for 4' x 12" Step	1	1
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	3
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	1
ISRSTEPGRPD	Two pack of step guard rail ramp panels w/ mounting hardware	2	1
ISRGRPD	Two pack guard rail panels for 4' ramps w/ mounting hardware	2	3
ISARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	1

IS24RWC, IS24RWT, IS24RWI



Straight Wheelchair Ramp for 24 inch High Stages Wheelchair ramps include guardrails (not shown)

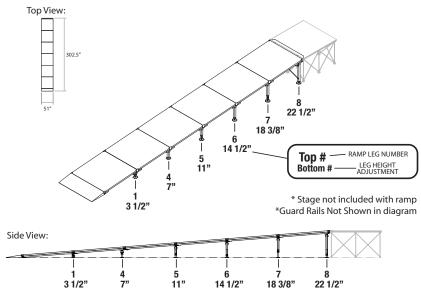


SKU	DESCRIPTION	PCS PER Master Pack	QTY IN Set
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD	4' x 4' TuffCoat Finish Platforms	2	3
or ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	6
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	1
ISRGRPD	Two pack guard rail panels for 4' ramps w/ mounting hardware	2	5
ISARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1

IS24RLWC, IS24RLWT, IS24RLWI



Straight Wheelchair Ramp with Landing for 24 inch High Stages



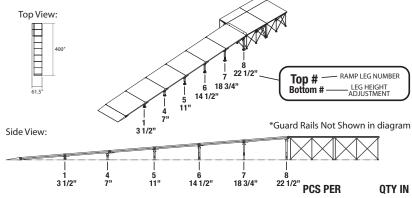


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN Set
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD	4' x 4' TuffCoat Finish Platforms	2	4
or ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISSTEPC4	4' x 1' Carpet Finish Step Platform		
or ISSTEPT4	4' x 1' TuffCoat Finish Step Platform	1	2
or ISSTEPI4	4' x 1' Industrial Finish Step Platform		
IS4X4X24	24" High Riser for 4'X4' Platform	1	2
ISSTEP4X24	24" High Riser for 4' x 12" Step	1	2
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	6
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	1
ISRSTEPGRPD	Two pack of step ramp guard rail panels w/ mounting hardware	2	1
ISRGRPD	Two pack guard rail panels for 4' ramps w/ mounting hardware	2	7
ISARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	1

IS24RSBWC, IS24RSBWT, IS24RSBWI



Switch Back Wheelchair Ramp for 24 inch High Stages

Wheelchair ramps include guardrails (not shown)

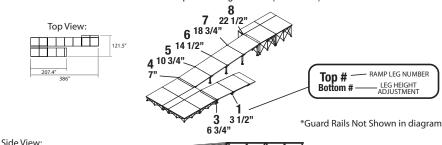


Side View:		PCS PER	QTY IN
SKU	DESCRIPTION	MASTER PACK	SET
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD	4' x 4' TuffCoat Finish Platforms	2	6
or ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISSTEPC4	4' x 1' Carpet Finish Step Platform		
or ISSTEPT4	4' x 1' TuffCoat Finish Step Platform	1	4
or ISSTEPI4	4' x 1' Industrial Finish Step Platform		
IS4X4X8	8" High Riser for 4'X4' Platform	1	4
IS4X4X24	24" High Riser for 4'X4' Platform	1	2
ISSTEP4X8	8" High Riser for 4' x 12" Step	1	2
ISSTEP4X24	24" High Riser for 4' x 12" Step	1	2
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	3
ISRPF	Metal platform assembly plate	1	6
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	1
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	1
ISRSTEPGRPD	Two pack of step ramp guard rail panels w/ mounting hardware	2	2
ISRGRPD	Two pack guard rail panels for 4' ramps w/ mounting hardware	2	8
ISARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	3
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	3

IS24R90WC, IS24R90WT, IS24R90WI



90 Degree Turn Wheelchair Ramp for 24 inch High Stages

Wheelchair ramps include guardrails (not shown)

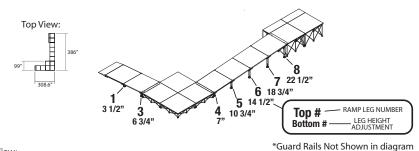


Side View:		uaru halis Not Showii ili diagra	
		PCS PER	QTY IN
SKU	DESCRIPTION	MASTER PACK	SET
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD	4' x 4' TuffCoat Finish Platforms	2	6
or ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISSTEPC4	4' x 1' Carpet Finish Step Platform		
or ISSTEPT4	4' x 1' TuffCoat Finish Step Platform	1	2
or ISSTEPI4	4' x 1' Industrial Finish Step Platform		
IS4X4X8	8" High Riser for 4'X4' Platform	1	4
IS4X4X24	24" High Riser for 4'X4' Platform	1	2
ISSTEP4X24	24" High Riser for 4' x 12" Step	1	2
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	3
ISRPF	Metal platform assembly plate	1	6
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	1
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	1
ISRSTEPGRPD	Two pack of step ramp guard rail panels w/ mounting hardware	2	1
ISRGRPD	Two pack guard rail panels for 4' ramps w/ mounting hardware	2	8
ISARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	3
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	3

IS32RC, IS32RT, IS32RI



Equipment Ramp for 32 inch High Stages

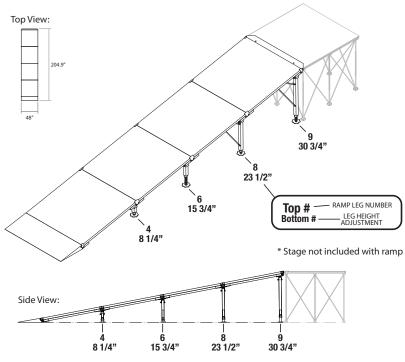


SKU	DESCRIPTION	PCS PER Master Pack	QTY IN SET
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD or	4' x 4' TuffCoat Finish Platforms	2	2
ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	4
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	1
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	2

IS32RLC, IS32RLT, IS32RLI



Equipment Ramp with Landing for 32 inch High Stages

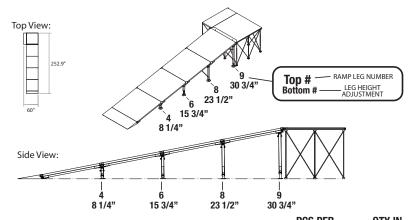


SKU	DESCRIPTION	PCS PER Master Pack	QTY IN SET
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD or	4' x 4' TuffCoat Finish Platforms	2	2
ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISP4X4CS	4' x 4' Carpet Finish Step Platform		
or ISP4X4TS	4' x 4' TuffCoat Finish Step Platform	1	1
or ISP4X4IS	4' x 4' Industrial Finish Step Platform		
ISSTEPC4	4' x 1' Carpet Finish Step Platform		
or ISSTEPT4	4' x 1' TuffCoat Finish Step Platform	1	1
or ISSTEPI4	4' x 1' Industrial Finish Step Platform		
IS4X4X32	32" High Riser for 4'X4' Platform	1	1
ISSTEP4X32	32" High Riser for 4' x 12" Step	1	1
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	4
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	1
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	2

IS32RCGR, IS32RTGR, IS32RIGR



Equipment Ramp with Guard Rails for 32 inch High Stages

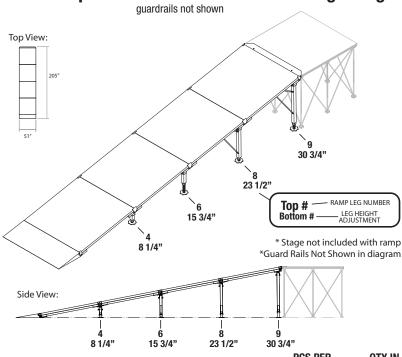


SKU	DESCRIPTION	PCS PER Master Pack	QTY IN SET
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD or	4' x 4' TuffCoat Finish Platforms	2	2
ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	4
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	1
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	2
ISRGRPD	Two pack guard rail panels for 4' ramp w/ mounting hardware	2	3
ISARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1

IS32RLCGR, IS32RLTGR, IS32RLIGR



Equipment Ramp with Guard Rails and Landing for 32 inch High Stages

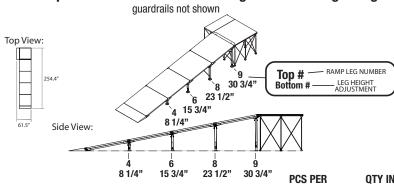


01/11	8 1/4" 15 3/4" 23 1/2" 30 3/-	PUS PER	QTY IN
SKU	DESCRIPTION	MASTER PACK	SET
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD	4' x 4' TuffCoat Finish Platforms	2	2
or ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISP4X4CS	4' x 4' Carpet Finish Step Platform		
or ISP4X4TS	4' x 4' TuffCoat Finish Step Platform	1	1
or ISP4X4IS	4' x 4' Industrial Finish Step Platform		
ISSTEPC4	4' x 1' Carpet Finish Step Platform		
or ISSTEPT4	4' x 1' TuffCoat Finish Step Platform	1	1
or ISSTEPI4	4' x 1' Industrial Finish Step Platform		
IS4X4X32	32" High Riser for 4'X4' Platform	1	1
ISSTEP4X32	32" High Riser for 4' x 12" Step	1	1
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	4
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	1
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	2
ISRSTEPGRPD	Two pack of step ramp guard rail panels w/ mounting hardware	2	1
ISRGRPD	Two pack guard rail panels for 4' ramps w/ mounting hardware	2	4
ISARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	1

IS32RWC, IS32RWT, IS32RWI



Straight Wheelchair Ramp for 32 inch High Stages

Wheelchair ramps include guardrails (not shown)

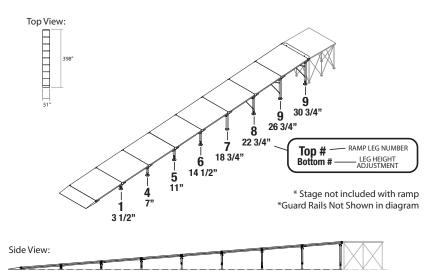


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN Set
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD	4' x 4' TuffCoat Finish Platforms	2	4
or ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	8
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	2
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	3
ISRGRPD	Two pack guard rail panels for 4' ramps w/ mounting hardware	2	7
ISARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1

IS32RLWC, IS32RLWT, IS32RLWI



Straight Wheelchair Ramp with Landing for 32 inch High Stages



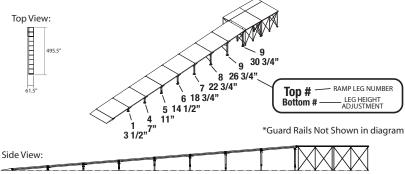


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN Set
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD	4' x 4' TuffCoat Finish Platforms	2	5
or ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISSTEPC4	4' x 1' Carpet Finish Step Platform		
or ISSTEPT4	4' x 1' TuffCoat Finish Step Platform	1	2
or ISSTEPI4	4' x 1' Industrial Finish Step Platform		
IS4X4X32	32" High Riser for 4'X4' Platform	1	2
ISSTEP4X32	32" High Riser for 4' x 12" Step	1	2
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	1
ISRPF	Metal platform assembly plate	1	8
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	2
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	3
ISRSTEPGRPD	Two pack of step ramp guard rail panels w/ mounting hardware	2	1
ISRGRPD	Two pack guard rail panels for 4' ramps w/ mounting hardware	2	9
ISARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	1

IS32RSBWC, IS32RSBWT, IS32RSBWI



Switch Back Wheelchair Ramp for 32 inch High Stages

Wheelchair ramps include guardrails (not shown)

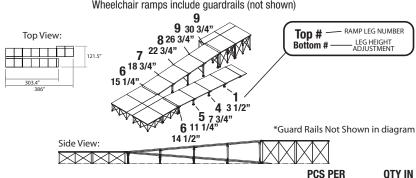


SKU	DESCRIPTION	PCS PER Master Pack	QTY IN Set
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD or	4' x 4' TuffCoat Finish Platforms	2	7
ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISSTEPC4	4' x 1' Carpet Finish Step Platform		
Or ISSTEPT4	4' x 1' TuffCoat Finish Step Platform	1	4
or ISSTEPI4	4' x 1' Industrial Finish Step Platform		
IS4X4X16	16" High Riser for 4'X4' Platform	1	4
IS4X4X32	32" High Riser for 4'X4' Platform	1	2
ISSTEP4X16	16" High Riser for 4' x 12" Step	1	2
ISSTEP4X32	32" High Riser for 4' x 12" Step	1	2
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	3
ISRPF	Metal platform assembly plate	1	8
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	2
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	2
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	3
ISRSTEPGRPD	Two pack of step ramp guard rail panels w/ mounting hardware	2	2
ISRGRPD	Two pack guard rail panels for 4' ramps w/ mounting hardware	2	10
ISARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	3
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	3

IS32R90WC, IS32R90WT, IS32R90WI



90 Degree Turn Wheelchair Ramp for 32 inch High Stages

Wheelchair ramps include guardrails (not shown)

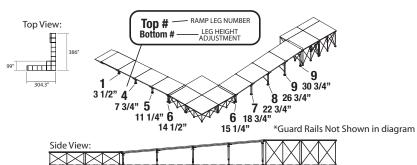

SKU	DESCRIPTION	PCS PER Master Pack	QTY IN Set
ISP4X4CD	4' x 4' Carpet Finish Platforms		
or ISP4X4TD	4' x 4' TuffCoat Finish Platforms	2	7
or ISP4X4ID	4' x 4' Industrial Finish Platforms		
ISSTEPC4	4' x 1' Carpet Finish Step Platform		
or ISSTEPT4	4' x 1' TuffCoat Finish Step Platform	1	2
or ISSTEPI4	4' x 1' Industrial Finish Step Platform		
IS4X4X16	16" High Riser for 4'X4' Platform	1	4
IS4X4X32	32" High Riser for 4'X4' Platform	1	2
ISSTEP4X32	32" High Riser for 4' x 12" Step	1	2
ISRBP	Bottom ramp plate with mounting hardware	1	1
ISRCP	Platform connecting plate	1	3
ISRPF	Metal platform assembly plate	1	8
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	2
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	2
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	3
ISRSTEPGRPD	Two pack of step ramp guard rail panels w/ mounting hardware	2	1
ISRGRPD	Two pack guard rail panels for 4' ramps w/ mounting hardware	2	10
ISARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	3
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	3

Individual Ramp Components (US)

Platforms

ISSTEPC4	4' x 1' Carpet Finish Step Platform
ISPSTEPT4	4' x 1' Tuffcoat Finished Step Platform
ISSTEPI4	4' x 1' Industrial Finish Step Platform
ISP4X4CD	4' x 4' Carpet Finish Platforms (two pack)
ISP4X4CS	4' X 4' Carpet Finish Platform (single pack)
ISP4X4TD	4' x 4' Tuffcoat Finished Platforms (two pack)
ISP4X4TS	4' x 4' Tuffcoat Finished Platform (single pack)
ISP4X4ID	4' x 4' Industrial Finish Platforms (two pack)
ISP4X4IS	4' x 4' Industrial Finish Platform (single pack)

Risers

IS4X4X8	8" High Riser for 4' x 4' Platform
IS4X4X16	16" High Riser for 4' x 4' Platform
IS4X4X24	24" High Riser for 4' x 4' Platform
IS4X4X32	32" High Riser for 4' x 4' Platform
ISSTEP4X8	8" High Riser for 4' x 1' Step
ISSTEP4X16	16" High Riser for 4' x 1' Step
ISSTEP4X24	24" High Riser for 4' x 1' Step
ISSTEP4X32	32" High Riser for 4' x 1' Step

Ramp Frames and Connection Plates

ISRPF	Ramp platform frame with mounting hardware
ISRBP	Bottom ramp plate with mounting hardware
ISRCP	Platform connecting plate with mounting hardware

Ramp Legs

IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware
IS2AL2	Two pack of equipment ramp adjustable leg # 2 with hardware
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware
ISLCB	Pack of cross bars for legs # 8 or 9

Ramp Guard Rails

ISRGRPD
ISRSTEPGRPD
ISARGRPD
IS2CMB

Two pack of guard rail panels for 4' ramps w/ mounting hardware Two pack of step guard rail ramp panels w/ mounting hardware Two pack of adjustable ramp guard rail panels w/ mounting hardware Two pack of guard rail panel corner mounting brackets

Ramp Transportation Systems (optional)

Caster Boards



IS4X4CB - Perfect for large ramp systems, our caster board is capable of holding up to 24 4'x4' platforms or ramp frames (can also support ramp connecting plates and legs).

Guardrail Trolley




ISTROLLEY - The multi-purpose trolley can transport either guard rails, platforms or ramp frames and legs. The ISTROLLEY is capable of supporting either 10 platforms, 12 guard rails, or 12 ramp frames.

CONTACT AN INTELLISTAGE DEALER OR VISIT WWW.INTELLISTAGE.COM TO DISCUSS YOUR TRANSPORTATION NEEDS

Limited 2 Year Warranty

Road Ready warrants to the original owner of each new IntelliStageTM product, for a period of 2 years form the date of purchase, (provided that it is purchased at an Authorized IntelliStageTM Dealer) that is free of defects in materials and workmanship and that each product meets or exceeds all factory published specifications. This warranty is void if the product has been tampered with or misused beyond reasonable wear, and shall not apply if the product has been physically damaged. Improper handling, set-up or use of this unit could cause it to fail which could lead to serious injury or death. Please be sure to read, understand and follow all operating instructions and weight load information in this manual before using this product. Do not allow children or untrained persons to use this product. There are no obligations of liability on the part of Road Ready for any personal injuries, death, consequential damage or any other indirect damages with respect to, loss of property, revenues, profit or costs of removals, installations or reinstallations arising out of, or in connection with, the use or performance of an IntelliStageTM product.

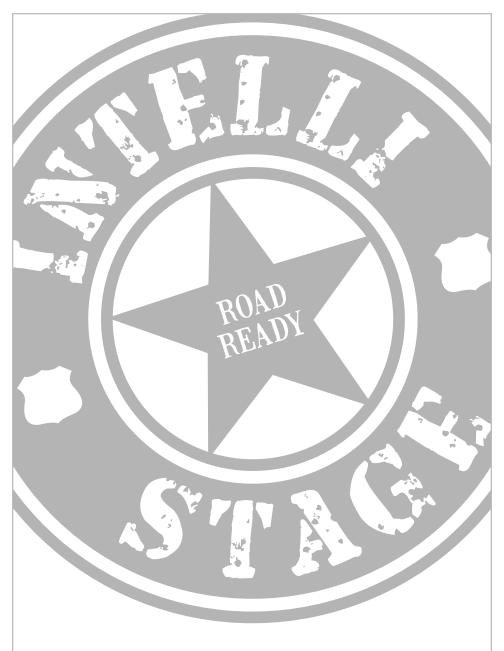



IntelliStage™
12662 Corral Place ★ Santa Fe Springs CA 90670
Ph: 562.906.6185 ★ Fax: 562.906.6186 Email: usa@IntelliStage.com * www.IntelliStage.com